

Collection times for garden parties 2023 are all from **5pm** unless you have paid extra for late night collection or overnight hire prior to the day. Collections for hall or venue hires will be collected on time as selected on your booking.



WE HOPE YOU ENJOY USING THIS INFLATABLE

For your safety and the safety of others, please adhere to the safety instructions below.



Party Poppers, Silly String, Confetti and Confetti balloons can all cause serious staining to the PVC on our inflatables, There is no way to remove this.

Any breach in the above rules could lead to liability of repair costs





Overnight Hire

If you have had your bouncy castle delivered early or have an overnight hire, please use this guide at the end of the day.

- 1. Turn off the blower from the power, you can open any deflation zips to speed up deflation.
- 2. If hiring a disco castle please **remove the speaker and light**. The speakers are always situated at the back of the inflatable and are accessed by a velcro hatch from the outside. Lights can also be accessed from the back or at the top. Please remove **and store indoors**.



Our yellow 16amp extension reels and blowers are waterproof and do not need to be moved or covered.



3. Cover with the supplied groundsheet and 4 groundsheet pegs, these pegs are smaller than the ones used to anchor the inflatable as they are only to keep the groundsheet in place.

Covering the inflatable with a groundsheet protects it from fox bites and poor weather, this ensures the inflatable stays damage free and as dry as possible in case of rain overnight.

4. Collection Day, you are welcome to use the inflatable the next day by removing the groundsheet and powering on ensuring all zips are done up.

Please remember your confirmation email states that **overnight hires will be collected anytime between 11- 4pm the next day**, we cannot guarantee a specific time because drivers will have around 10 collections each and will be done in the quickest order.

